

# Liste des relais et fusibles de la Boxster 986 (1996 - 2004)



## Panneau de relais principal

Position	Function
1	Not used
2	Not used
3	Hazard warning flasher
4	Outside rear view mirror heater Rear window defogger (hardtop)
5	97-98: Telephone speaker changeover relay 99-04: Not used
6	Daytime running lights
7	Daytime running lights
8	Headlight washer
9	Terminal XE
10	Horns
11	Foglights (USA, Japan)
12	Fuel pump
13	Convertible top control module
14	Wiper intermittent control
15	A/C and heater system
16	Radiator fan 1, low speed
17	Radiator fan 1, high speed
18	Radiator fan 2, low speed
19	Radiator fan 2, high speed

## Panneau de relais secondaire

Position	Function
1	DME main relay
2	Fuel injectors Ignition coils Oxygen sensor heaters
3	Spoiler extension
4	A/C compressor
5	Not used
6	97, 99: not used 98, 01-04: Back-up lights jumpers
7	Starter
8	Engine compartment blower
9	Spoiler retraction
10	97: Spoiler retraction 98-04: Secondary air pump
11	97: Secondary air pump 98-04: Not used
12	Not used

## Panneau des fusibles

Position	Ampérage	Fonction
A1	97-98: 7.5 99-04: 15	High beam right
A2	97-98: 7.5 99-04: 15	High beam left
A3	7.5	Side marker right
A4	7.5	Side marker left
A5	97: 7.5 98-04: 15	License plate lights 98-04: Instrument lights 98-04: Locating lights
A6	25	Seat heater
A7	25	Foglights
A8	7.5	License plate lights (Canada)
A9	97-98: 7.5 99-04: 15	Low beam right
A10	97-98: 7.5 99-04: 15	Low beam left
B1	15	Instruments Tiptronic 97-00: Traction control switch 01-04: PSM
B2	97-99: 7.5 00-04: 15	97-99: Radio 00-04: Hazard warning system 00-04: Turn signals
B3	25	Horns
B4	15	Engine compartment blower relay
B5	7.5	Backup lights 98-04: Seat and mirror memory control module 98-04: Outside rear view mirror adjustment
B6	15	Convertible top control module Turn signals 98-04: Power windows
B7	15	Brake lights Cruise control
B8	15	Alarm control module DME control module 98-04: Tiptronic control module
B9	15	ABS control module 97-00: Traction control module 01-04: PSM control module
B10	15	Instrument cluster diagnosis 97: Mirror adjustment 99-04: Headlight vertical aim control 01-04: Parking assistant
C1	25	DME main relay
C2	30	Ignition Oxygen sensors heaters 99-04: Fuel injection
C3	15	Alarm control module 98-04: Power windows 99-04: Interior lights
C4	99-00: 25 01-04: 30	Fuel pump relay

Position	Ampérage	Fonction
C5	00-04: 5	97-99: Not used 00-04: Engine compartment blower stage 1
C6	25	Wipers and washers
C7	97-99: 7.5	Terminal X control
C8	97-99: 30 00-04: 40	Radiator fan right
C9	25	Headlight cleaning system
C10	97-99: 30 00-04: 40	Radiator fan left
D1	30	Power windows
D2	30	Rear window, outside rearview mirror defogger (hardtop)
D3	30	Convertible top motor
D4		Not used
D5	15	Lighter
D6	30	A/C and heater system relay
D7	15	97-98: DME control module 97-99: Hazard warning lights 00: Rear spoiler motor
D8	97-00: 15 01-04: 7.5	97-99: Rear spoiler motor 00: Radio 01-04: Radio and sound system (option pack)
D9	15	97-00: Sound system (option pack) 01-04: Amplifier
D10	7.5	Mounting point for retrofit
E1	7.5	Radio Terminal 86s alarm control module 99-04: Cluster 99-04: Daytime running lights 01-04: Navigation
E2	98-04: 7.5	97: Not used 98: Seat memory control module 99-04: Seat and mirror memory control module
E3	30	Seat back control, left 98-04: Seat and mirror memory control module
E4	30	Seat back control, right 98-04: Seat and mirror memory control module
E5	98-04: 7.5	98-04: Navigation
E6	7.5	Terminal 30 telephone 98-04: Navigation 99-04: ORVR
E7	7.5	A/C and heater system
E8	98-04: 7.5	97: Not used 98-04: Terminal 15 telephone 99-04: Navigation
E9	97: 7.5	97: Terminal 15 telephone 98-00: Not used 01-04: PSM control module
E10	15	97: Tiptronic 98-00: Not used 01-04: PSM switch